


Re-seating the Micro SD Card and/or SIM card in the *Dash Camera 220*

1. Remove camera from mount
2. Locate the Allen Wrench that was included in the camera kit
3. Locate compartment under the camera and proceed to unscrew the lid



4. Locate either the Micro SD card or SIM card.
 - a. The Micro SD Card (Memory Card) is shown by the green box below.
 - b. The SIM Card (Cellular Card) is shown by the red box below.
5. Pressing down should spring it back up, but you may need to work it out a little.
 - a. If removing the Micro SD Card to use on a computer, fully remove this card.
 - b. ***If the Cellular (Globe) icon is illuminated on the camera, we want to “re-seat” (remove) the white SIM card, and then put it back in the same way. This can restore a cellular connection to the camera.***

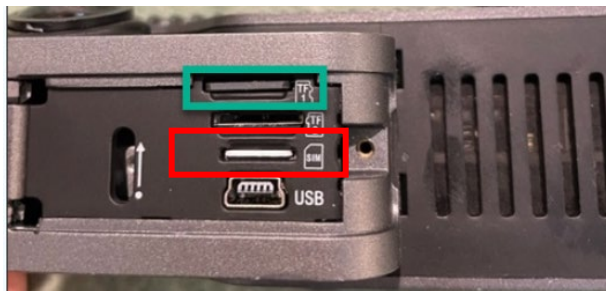

6. If using the *Cebia II* software to access the data, insert the Micro SD card into the SD card slot of your computer (If your device does not contain a slot for a Micro SD card, you may need to use an SD card adapter.)

*****Please note: The Micro SD cards and SIM Cards are quite fragile. Handle with care.**